

HAPPY SCOOTER



IMPORTANT OPERATING ELEMENTS

- (1) Key switch (ON/OFF)
- (2) Release lever for moving the seat (front right under the seat)
- (3) Release lever for swiveling the seat (left under the seat)
- (4) Control console
- (5) Brake lever (right lever)
- (6) Lever for engaging and disengaging the engine for manual pushing




+ 41 61 262 03 67 ■ info@happyscooter.ch

WWW.HAPPYSCOOTER.CH



HAPPY SCOOTER

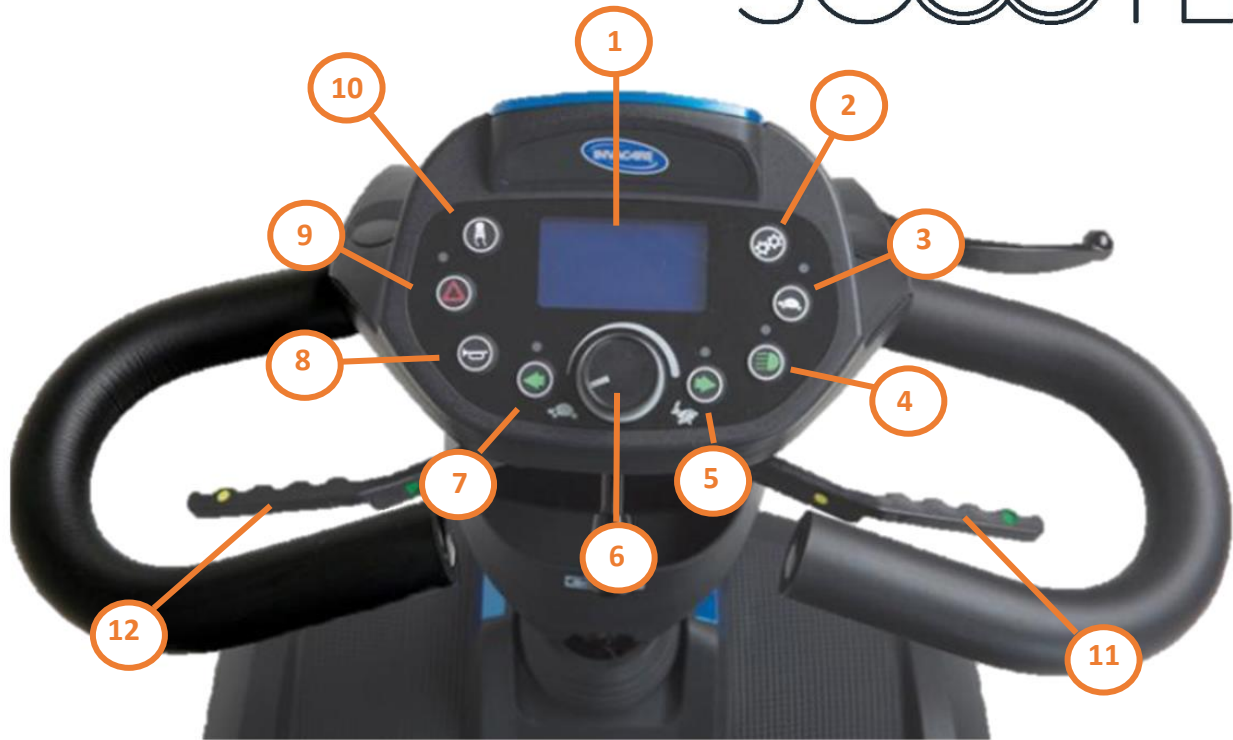

ARRANGEMENT OF THE CONTROL PANEL

- (1) Status display
- (2) Settings
- (3) Low speed mode
- (4) Driving light
- (5) Right turn signal
- (6) Speed control
- (7) Turn signal left
- (8) Horn
- (9) Warning lights
- (10) Speed reduction for cornering (on/off)
- (11) Driving lever forward
- (12) Driving lever backward



+ 41 61 262 03 67 ■ info@happyscooter.ch

WWW.HAPPYSCOOTER.CH

